




Relief Valve Installation

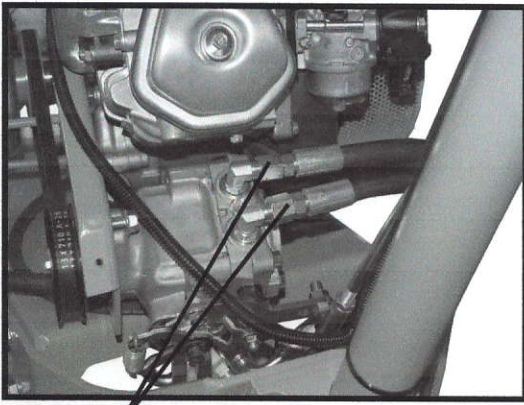


STEP 1
Remove 2 Hoses

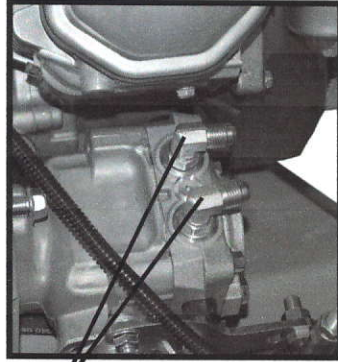


STEP 2
Remove 2 Elbow Fittings

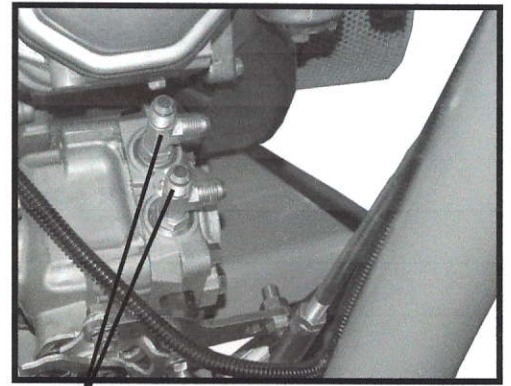


STEP 3
Install 2 T Fittings

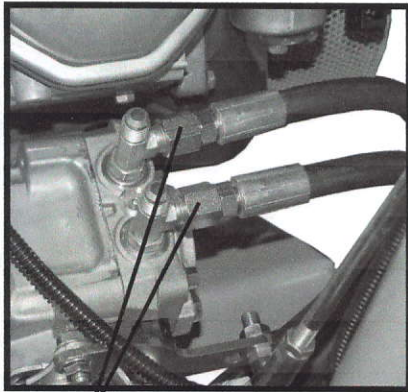


STEP 4
Fasten 2 Hoses

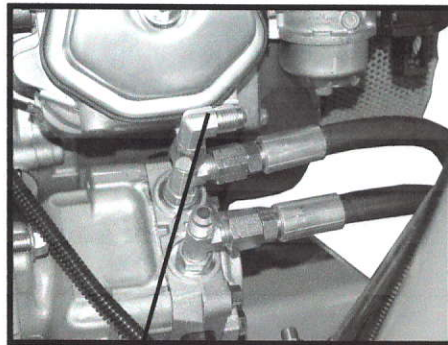


STEP 5
Install 1 Elbow
on Front T Fitting

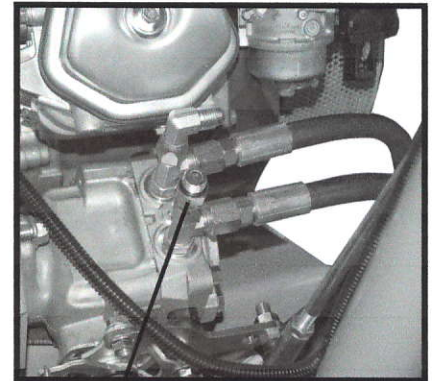


STEP 6
Install 1 Straight
Fitting on Back T

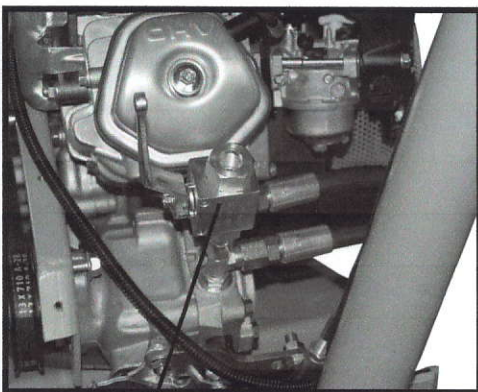

STEP 7
Install Ball Valve
on Back Straight Fitting

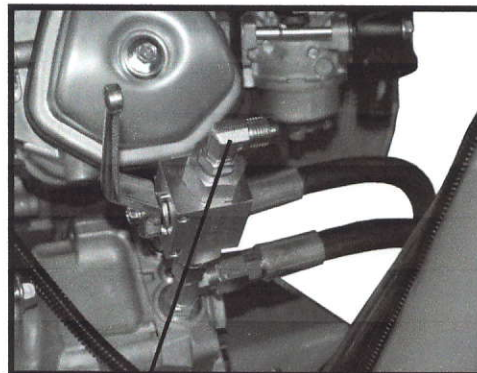

STEP 8
Install Elbow on
Top of Ball Valve

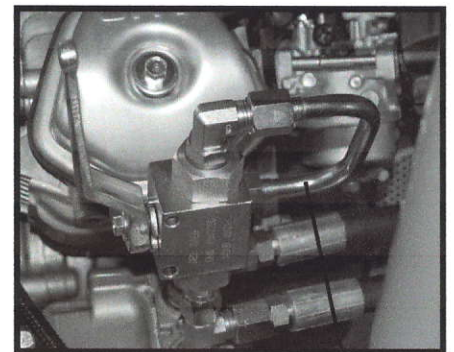

STEP 9
Install Connection
Loop to 2 Elbows

Tighten all fitting before operating